

Semley Dining Table Assembly Instructions

Thank you for purchasing this product. Please read these instructions carefully before use to ensure safe and satisfactory assembly & operation of this product. As this product is heavy, it's advisable to assemble as near as possible to the point of use.

You will find enclosed:-

- Bolt x8



 
- Allen Key



- Flat Washer x8




- TableTop x1



- Split Washer x8




 - Leg x 4




Please note these instructions must be followed precisely.



1 - Place the top of your dining table upside down on a blanket or other cushioned surface.

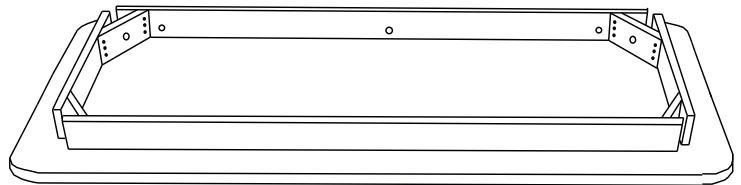


2 - Next take the first leg and slide into place

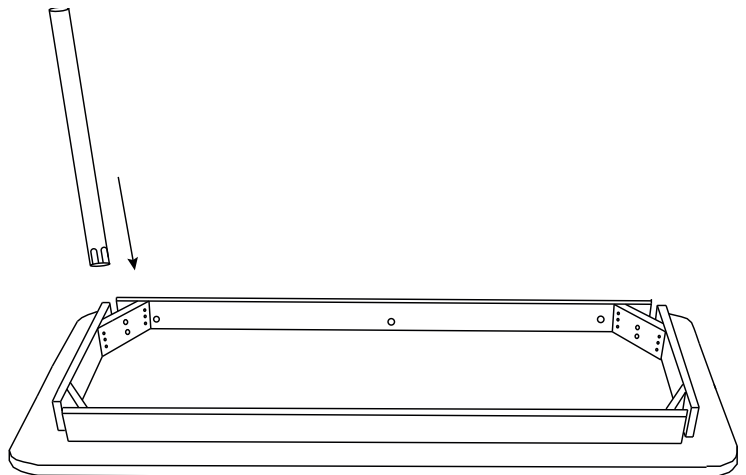

 
3 - Secure with two bolts on the inside of the corner brace. When doing so place a flat washer & split washer between the corner brace and the head of each bolt (the flat washer should be closest to the wood). First screw in by hand and then tighten with the allen key provided.

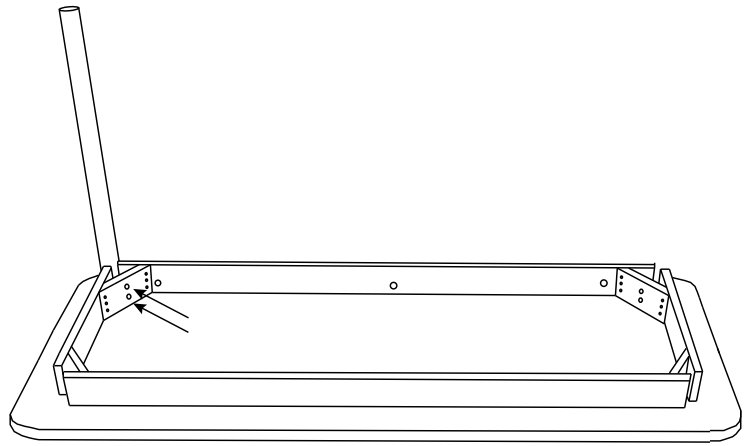

4 - Repeat step 2 and 3 for each leg.

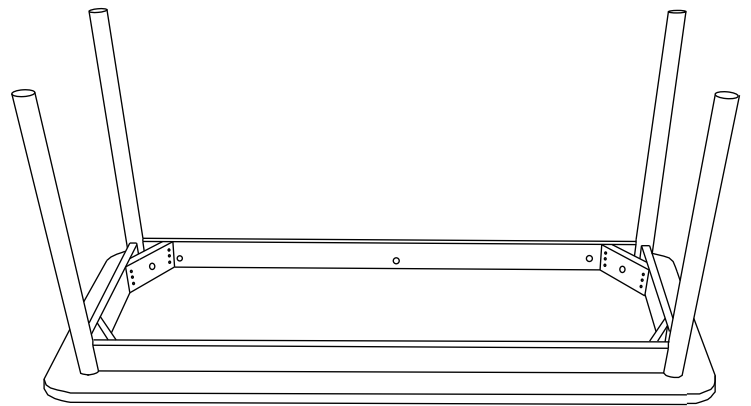

5 - Once complete, check all bolts are secure by tightening with the Allen Key provided. Then turn the table over by lifting the top without using the legs as leverage.

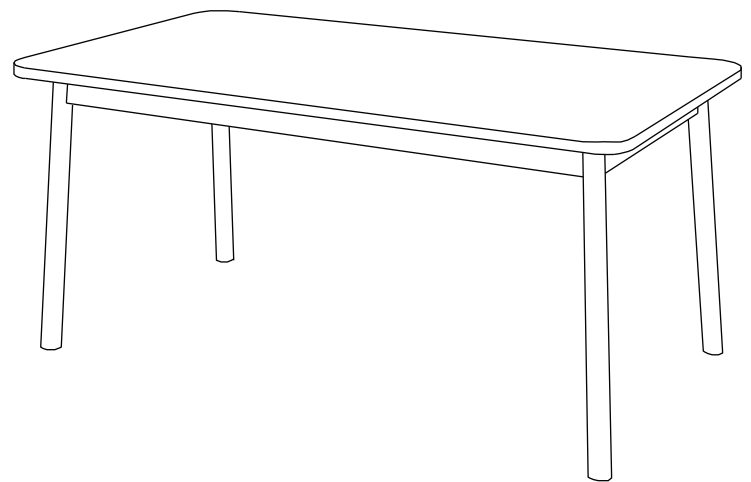

Safety Instructions / General Warnings

Never drag furniture when moving it, always lift it.

Periodically check all fixings to ensure none have come loose and re-tighten where necessary. Please take care when handling or moving the furniture as careless handling may cause damage or injury.

Furniture can be dangerous if incorrectly installed. Assembly should be carried out by a competent person. No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE